

QUEEN ANNE

The Queen Anne style was the dominant style of American domestic architecture from the period of 1880 to 1910. The style continued through the beginning of this century with decreasing popularity. The expanding railroad network of the period helped to spread the style by conveniently transporting the pre-cut architectural details typical of the style, such as corner brackets, gable ornament, towers, intricate wood shingle designs and gabled dormers.

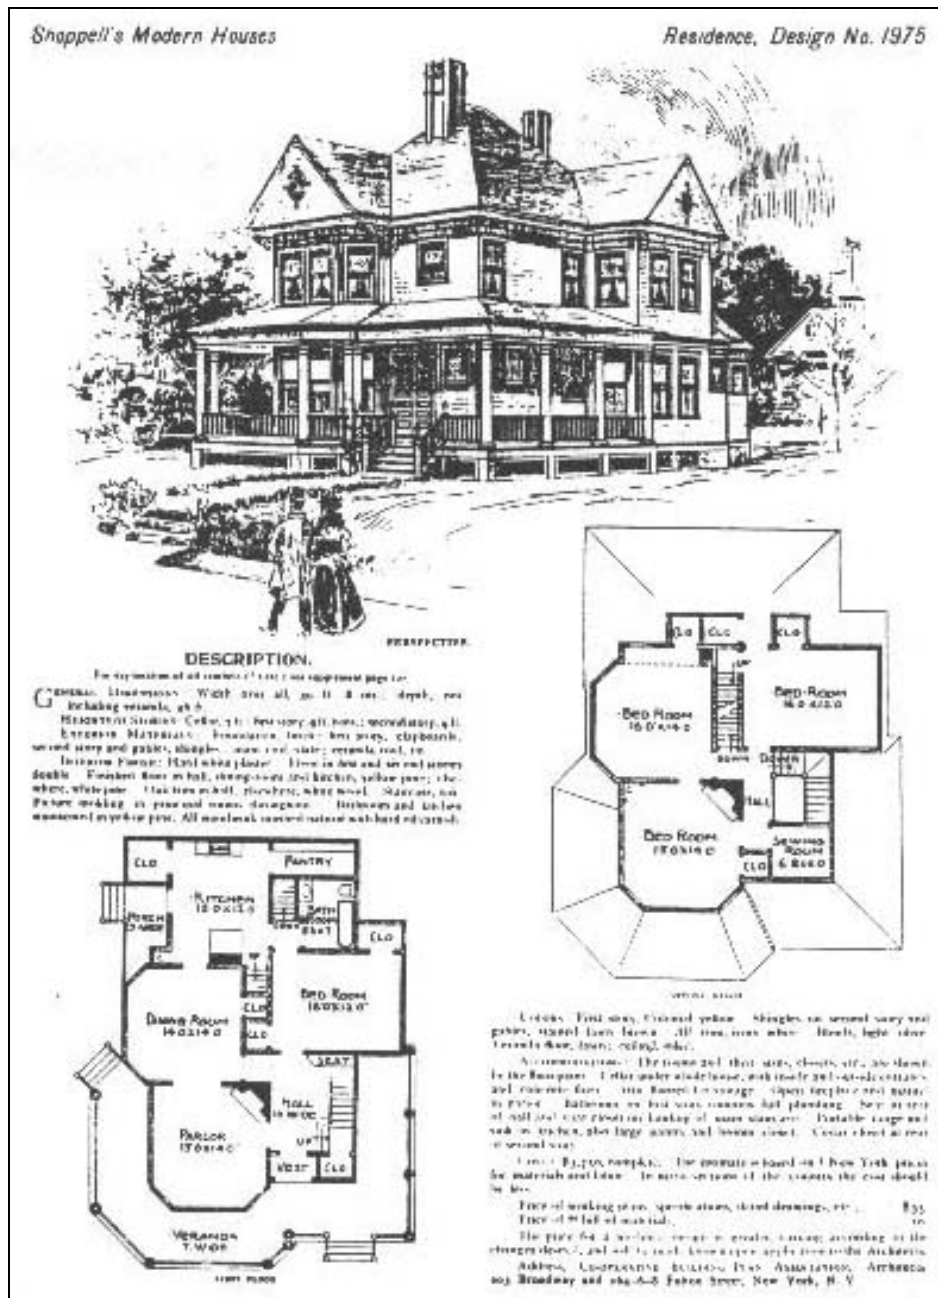


Figure 18: Illustration from *Shoppell's Modern Houses*, Design No. 1975.